

# WINDSPILL JR(tm) ADJUSTABLE Installation Instructions

The installation procedure for the Windspill JR Adjustable Hardware is the same as the attached directions for Windspill Deluxe Adjustable. The only difference is that the JR hardware does not have the “Banner Arrow” referred to in step 9. Instead, the two wings coming down from the rod support (with banner tie-down holes drilled through them) should always be on the banner side of the rod – both top and bottom. This allows the built in “cant” of the rod to provide proper pressure on the outside edge of the banner.